



DIGITUS® All in One UPS system



User Manual
DN-170110 • DN-170111

Safety Warning

- 1.** The UPS utilizes voltages that may be hazardous. Do not attempt to disassemble the unit. The unit contains no user serviceable parts. Only factory service personnel may perform repairs.
- 2.** Internal battery voltage is 12Vdc. sealed, lead-acid, 6 cells battery.
- 3.** Connection to any other type of receptacle other than a two-pole, three-wire grounded receptacle may result in shock hazard as well as violating to local electrical codes.
- 4.** In the event of an emergency, press the OFF button and disconnect the power cord from the AC power supply to properly disable the UPS.
- 5.** Do not allow liquids or any external objects to enter the UPS. Do not place beverages or any other liquid-containing vessels on or near the unit.
- 6.** This unit is designed for installation in a controlled environment (temperature controlled, indoor are free of conductive contaminants). Avoid installing the UPS in locations where there is static or flowing water, or excessive humidity.
- 7.** Do not plug the UPS input into its own output.
- 8.** Do not attach a power strip or surge suppressor to the UPS.
- 9.** Do not connect non-computer-related items, such as medical equipment, life-support equipment, microwave ovens, or vacuum cleaners to UPS.
- 10.** To reduce the risk of overheating the UPS, do not cover the UPS cooling vents and avoid exposing the unit to direct sunlight or installing the unit near heat emitting appliance such as air heaters or furnaces.
- 11.** Unplug the UPS prior to cleaning and do not use liquid or spray detergent.
- 12.** Do not dispose the batteries into fire as they may explode.
- 13.** Do not open or mutilate the battery or batteries. Released electrolyte is harmful to the skin and eyes. It may be toxic.
- 14.** A battery can present a risk of electrical shock and high short circuit current. The following precautions should be observed when working on batteries:

- Remove watches, rings, or other metal objects from the hands.
 - Use tools with insulated handles.
 - Wear rubber gloves and boots.
 - Do not lay tools or metal parts on the top of batteries.
 - Disconnect charging source prior to connecting or disconnecting batteries terminals.
- 15.** Servicing of batteries should be performed or supervised by personnel knowledgeable of batteries and the required precautions. Keep unauthorized personnel away from batteries.
 - 16.** When replacing batteries, replace with the same number and type of sealed lead-acid battery. The maximum ambient temperature rating is 40°C.
 - 17.** This pluggable type A equipment with battery already installed by the supplier is operator installable and may be operated by laymen.
 - 18.** During the installation of this equipment it should be assured that the sum of the leakage currents of the UPS and the connected loads does not exceed 3.5mA.
 - 19.** Beware of possibility of electric shock when disconnecting of this unit from the mains, hazardous voltage still may be accessible through supply from battery. The battery supply should be therefore disconnected from the plus and minus pole of the battery when maintenance or service work inside the UPS is necessary.
 - 20.** The mains socket outlet that supplies the UPS shall be installed near the UPS and shall be easily accessible.

INTRODUCTION

This UPS is specially designed for Personal Computer with multi-functions. Its light weight, compact design perfect fits to the limited working environment. The line of UPS is equipped with boost and buck AVR to stabilize input voltage range. It is also built-in with DC start function. This function enables the UPS to be started up without AC power supplied. Although it's a small UPS, the main features of UPS are listed below:

- Microprocessor control guarantees high reliability
- Equipped with boost and buck AVR
- Green Power Function for energy saving is for optional
- DC start function
- Auto restart while AC recovery
- Compact size, light wright
- Provides AC overload protection

PACKAGE CONTENT

- Main unit: UPS
- UPS quick installation guide
- Software CD
- Power cord (Input and output)

 
 
 
SPECIFICATION

| Capacity | VA | 600VA | 800VA |
|----------------------|-----------------------------------|--|--------------|
| Input | Voltage | 220VAC/230VAC/240VAC | |
| | Voltage Range | 162-290VAC | |
| Output | Voltage Regulation (Batt. Mode) | +/- 10% | |
| | Frequency | 50Hz or 60Hz | |
| | Frequency Regulation (Batt. Mode) | +/- 1Hz | |
| | Output Waveform | Simulated Since Wave | |
| Battery | Battery Type | 12V/7.0 AHx1 | 12V/9.0 AHx1 |
| | Recharge Time | 6-8 hours to 90% after complete discharge | |
| Transfer Time | Typical | 2-6 ms | |
| USB Charger | Typical | 5.0V/2.0A Max. | |
| Indicator | AC Mode | Green LED lighting | |
| | Battery Mode | Yellow LED lighting | |
| | Fault Mode | Red LED lighting | |
| Audible alarm | Backup Mode | Sounding every 10 seconds | |
| | Low Battery | Sounding every 1 second | |
| | Overload | Sounding every 0.5 second | |
| | Fault | Continuously Sounding | |
| Protection | Full Protection | Discharge, overcharge, and overload protection | |
| Physical | Dimension (mm), L x W x H | 293 x 202 x 93 | |
| | Weight | 4.5 kg | 5.2 kg |
| Environment | Operating Environment | 0-90% RH @ 0-40°C (non-condensing) | |
| | Noise Level | Less than 40dB | |

SYSTEM DESCRIPTION

Product Overview:

1. Power Switch
2. LED indicator
3. USB Charger
4. USB Port
5. Input
6. Bypass
7. Output
8. RJ45 Port
9. Mounting Hole
10. Battery Cover

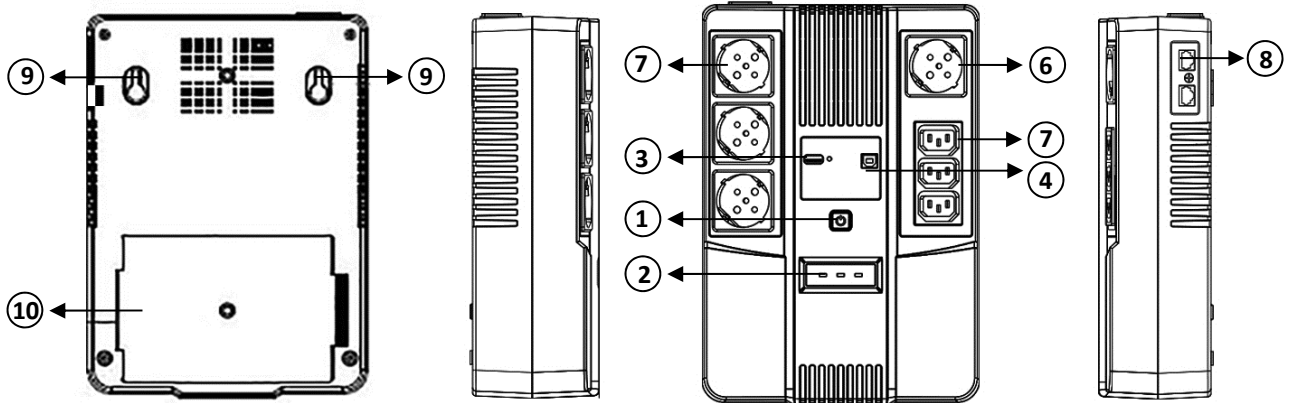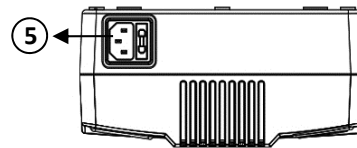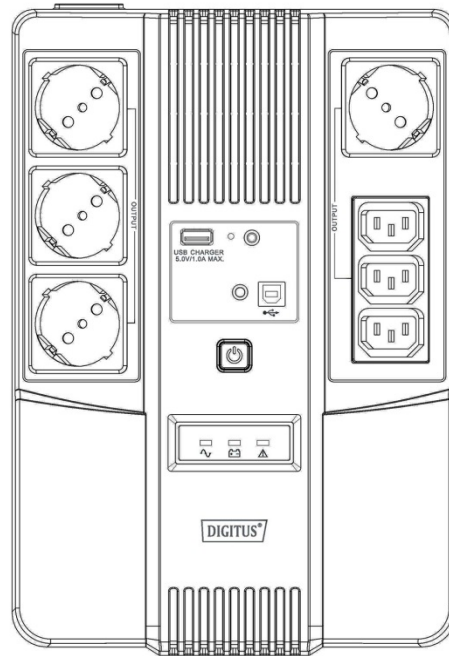

LED Indicators:

 
- **AC Mode:** Green - LED lighting
- **Battery Mode:** Yellow - LED flashing
- **Fault Mode:** Red - LED lighting

1. Inspection

Remove the UPS from its packaging and inspect it for damage that may have occurred during shipping. If any damage is discovered, repack the unit and return it to the place of purchase.

2. Charging

This unit is shipped from the factory with its internal battery fully charged. However, some charge may be lost during shipping and the battery should be recharged prior use. Turn on the UPS, plug the unit into an appropriate power supply and allow the UPS to charge fully by leaving it plugged in for at least 6 hrs with no load (no electrical devices such as computers, monitors, etc.) connected.

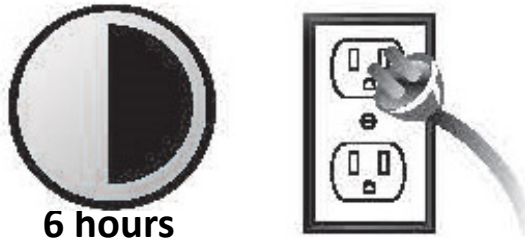


3. Placement

Install the UPS unit in any protected environment that provides adequate airflow around the unit, and is free from excessive dust, corrosive fumes and conductive contaminants. Do not operate your UPS in an environment where the ambient temperature or humidity is high.




 On the other hand, place the UPS away from the monitor at least 20cm to avoid interference.

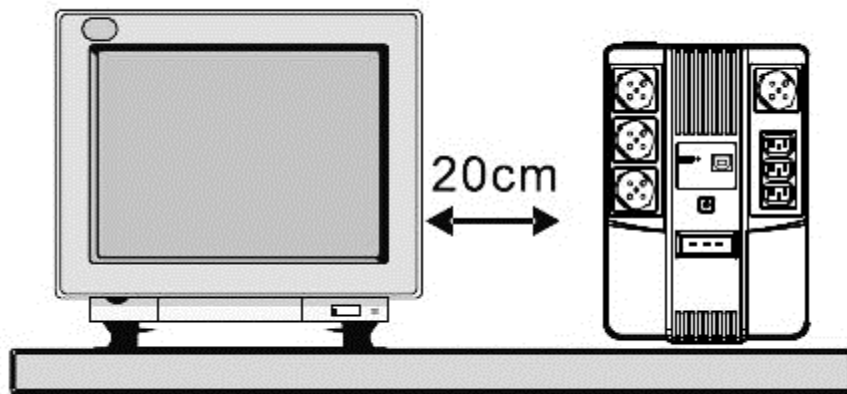


4. Connection

 Plug the UPS into a 2-pole, 3-wire grounded receptacle. Then connect one computer-related device into each of the power receptacles supplied on the back of the UPS.

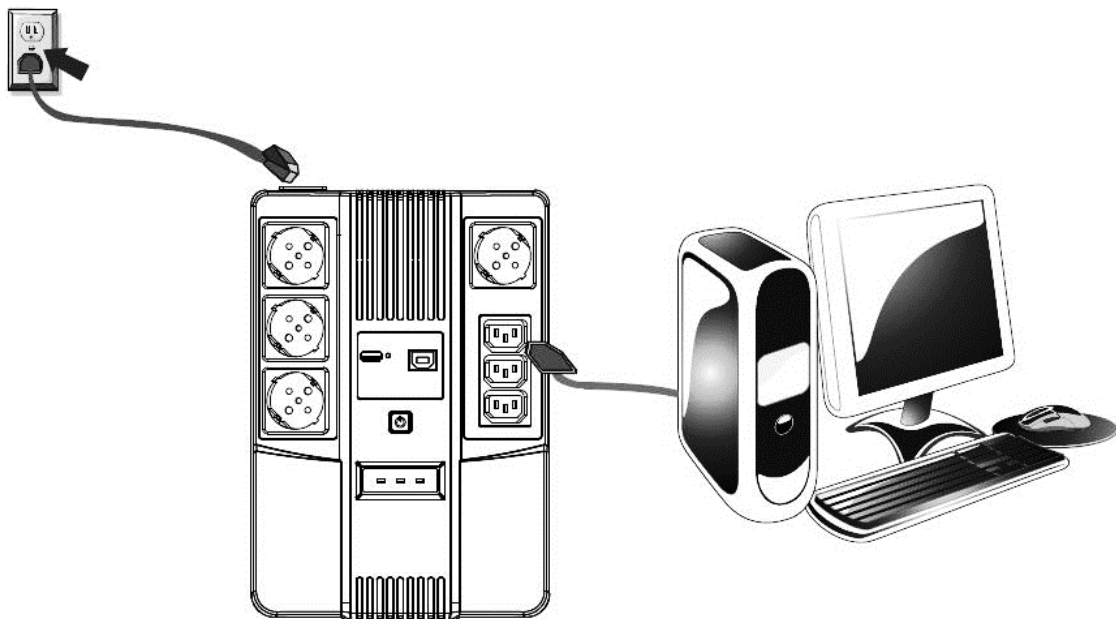

5. Turn On/Off

 To turn on the UPS unit, press the power switch lightly. To turn off the UPS unit, press the power switch again

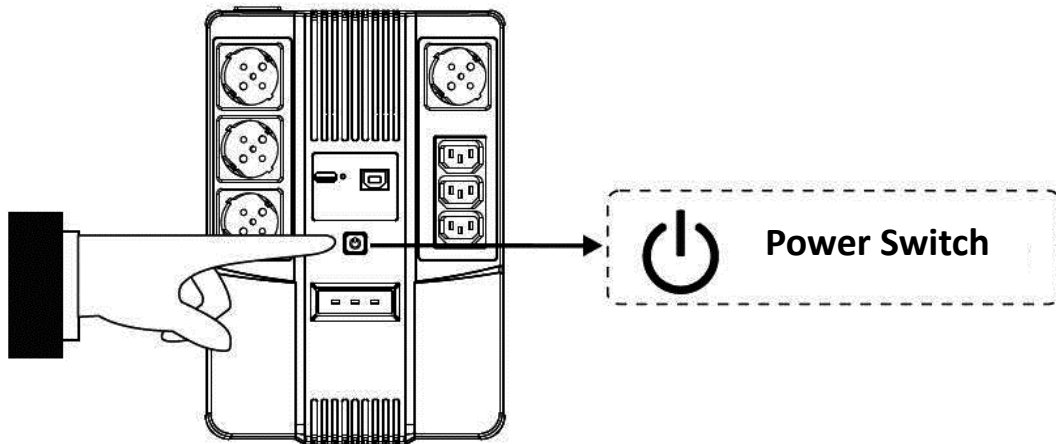

6. DC start

All series are equipped with DC Start. To start UPS when AC utility power is not available, simply press the power switch.

TROUBLE SHOOTING

| Symptom | Possible Cause | Proposed Action |
|---|--------------------------------|--|
| No LED display on the front panel | 1. Battery weak | 1. Charge battery up to 8 hours |
| | 2. Battery defect | 2. Replace with the same type of battery |
| | 3. Power switch is not pressed | 3. Press the power switch again |
| Alarm buzzer beeps continuously when AC supply is normal | Overload of the UPS | Verify that the load matches the UPS capability specified in the specs |
| When power failure, back-up time is shorten | 1. Overload of the UPS | 1. Remove some non-critical load |
| | 2. Battery voltage is too low | 2. Charge battery 8 hours or more |

| | | |
|--|---|--|
| | 3. Battery defect due to high temperature operation environment, or improper operation to battery | 3. Replace with the same type of battery |
| Mains normal but yellow LED is flashing | Power cord is loose | Reconnect the power cord properly |

The manual content may be changed. Please also refer to the latest version on the web shop.

This is a Class A product. In home environment, this product may cause radio interference. In this case, the user may be required to take appropriate measures.

Hereby Assmann Electronic GmbH, declares that the Declaration of Conformity is part of the shipping content. If the Declaration of Conformity is missing, you can request it by post under the below mentioned manufacturer address.

