D-Link
Building Networks for People

Quick Installation Guide

Краткое руководство по установке

DCS-4605EV

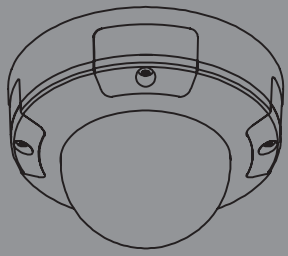

Vigilance 5 Megapixel H.265 Outdoor Dome Camera

5 Мп внешняя купольная антивандальная сетевая камера с ИК-подсветкой до 20 м, PoE, WDR и слотом microSD

Quick Installation Guide

ENGLISH

This installation guide provides basic instructions for installing the DCS-4605EV. For additional information about how to use the camera, please see the User Manual on the CD included in this package or from the D-Link support website.

Package Contents

- DCS-4605EV Vigilance 5 Megapixel H.265 Outdoor Dome Camera
- Cable Waterproofing Connector
- Mounting Kit
- Manual and Software on CD-ROM
- Quick Installation Guide

If any of the above items are missing, please contact your reseller.

Safety Notice:
Installation and servicing should be done by certified technicians in order to conform to all local codes and prevent voiding your warranty.

Hardware Overview

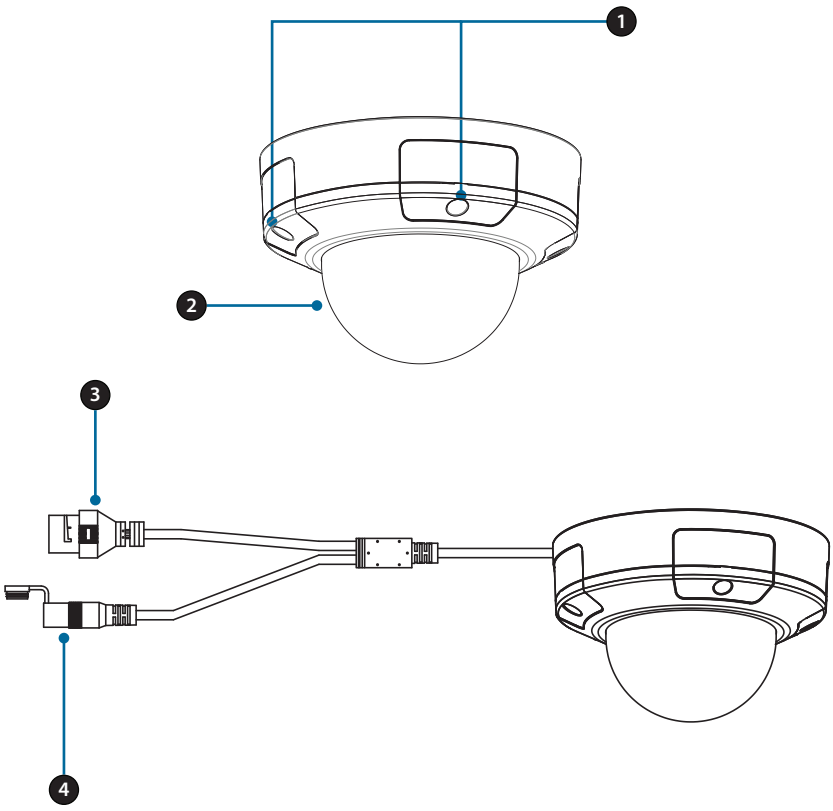

1	**Cover Screws**	These four screws can be removed with the included wrench.
2	**Protective Cover**	Protects the camera lens assembly from the environment.
3	**Ethernet Port**	RJ-45 connector for Ethernet which can also be used to power the camera using Power over Ethernet (PoE).
4	**Power Port**	Connects to an optional 12 V / 1.5 A power adapter (not included).

Hardware Overview

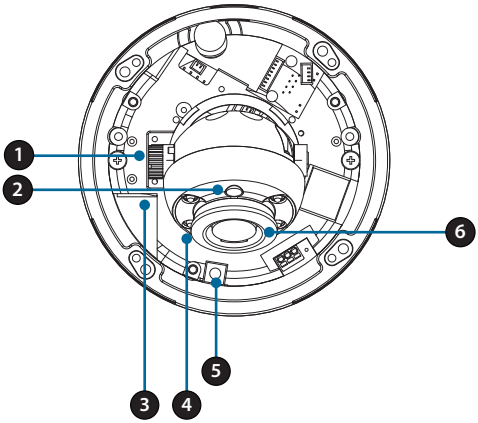

1	**Tilt Lock Screw**	Can be loosened to adjust the camera's tilt angle.
2	**Light Sensor**	Detects lighting levels and switches between day and night mode accordingly.
3	**microSD Card Slot**	Insert a microSD card for onboard storage of snapshots and video.
4	**IR LEDs**	Provide illumination for low-light environments.
5	**Reset Button**	Press and hold this button down for 10 seconds to reset the camera to factory default settings.
6	**Camera Lens**	Camera lens to record video of the surrounding area.

Configuring the Camera

Insert the included CD into your computer's CD-ROM drive to begin the installation. If the Autorun function on your computer is disabled, or if the D-Link Launcher fails to start automatically, click the Windows button, type **D:\autorun.exe** (where D: represents the drive letter of your CD-ROM drive), and press **Enter**.

Note: You can also go to the D-Link website to download the Setup Wizard in the Downloads section for your product model.

Click **Setup Wizard** and follow the instructions to install the Setup Wizard.

Click on the **D-Link Setup Wizard SE** icon that was created in your Windows Start menu (**Start > D-Link > Setup Wizard SE**).



The Setup Wizard will appear and display the MAC address and IP address of your camera(s). If you have a DHCP server on your network, a valid IP Address will be displayed. If your network does not use a DHCP server, the network camera's default static IP **192.168.0.20** will be displayed.

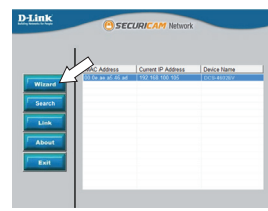

Select your camera, then click the **Wizard** button to continue.

Enter the Admin ID and password. When logging in for the first time, the default Admin ID is **admin** with the password left blank.

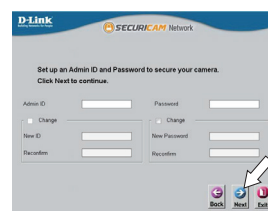

Click the checkboxes if you wish to change the admin ID and password for the camera, and enter the new ID and password you wish to use.

Click **Next** to continue.

Select **DHCP** if your camera obtains an IP address automatically from a DHCP server such as a router. Select **Static IP** if you want to manually enter the IP settings for the camera.

Click **Next** to continue.

Take a moment to confirm your settings and click **Restart** when you are done.

Viewing Your Camera via Web Browser

Click on the **D-Link Setup Wizard SE** icon that was created in your Windows Start menu (**Start > D-Link > Setup Wizard SE**).



Select the camera and click **Link** to access the web configuration.

The Setup Wizard will automatically open your web browser to the IP address of the camera.

The first time you connect to the camera, you will be asked to set a password for the administrator account. After entering a password, click **Save**.

OR

Under Password, enter the same password that you configured during setup and click **Login** to continue.

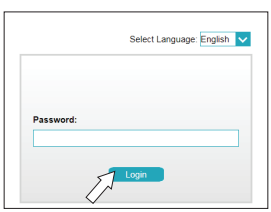

This section displays your camera's live video. You can quickly select your screen mode and video profile and view or operate the camera. For additional information about web configuration, please refer to the user manual included on the CD-ROM or the D-Link website.

Mounting Instructions

It is highly recommended that you configure and test your camera before mounting it.

Place the mounting sticker where you want to position the camera.

Use a 6 mm drill bit to make the required holes approximately 25 mm deep, then insert the wall anchors into the holes.

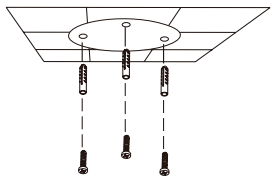

If you are running the camera cables through the wall, drill a hole in the center and pull the cables through the hole.

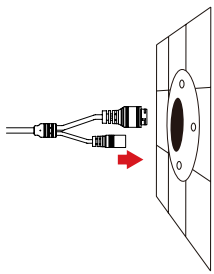

Use the included wrench to loosen the 4 screws on the top of the camera, then lift the camera cover off.



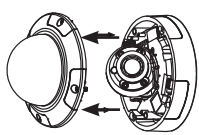

Use the screws provided to mount the camera to the wall.

If you are running the camera cables out the side of the camera, guide the camera cables through the cable channel on the base.

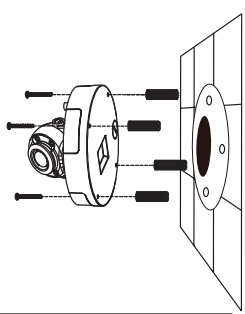

If you are mounting the camera to the ceiling, use a flathead screwdriver to remove the plastic hole cover from the bottom of the base, then guide the cables through the bottom.

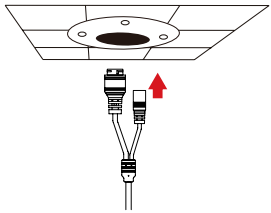

Connect the power and Ethernet cables, or just the Ethernet cable if you are using a PoE connection.

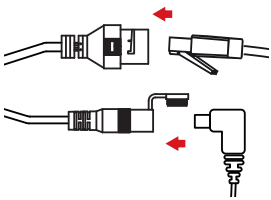

Loosen the adjustment screw on the side of the lens assembly, then re-tighten it after adjusting the lens assembly to the desired vertical angle. The camera supports from 30° to 90° of tilt.
You can also adjust the pan within a -120° to 120° range by rotating it clockwise or counter-clockwise.

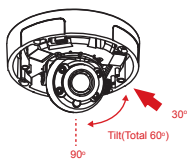

When you are done adjusting the camera's angle, put the inner cover back into place.

Note: The camera has a limited range of motion; if it stops when you are adjusting it, do not attempt to rotate or tilt the camera any further in that direction.

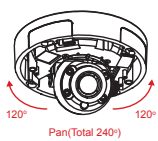

Use the screws provided to mount the camera to the ceiling.

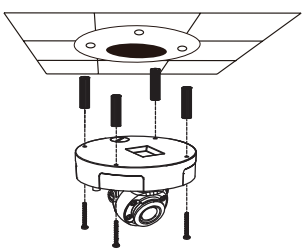

Re-attach the camera cover.

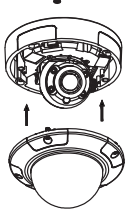

Waterproofing Your Installation

To waterproof your camera installation, follow the instructions below. Round Ethernet cable, a crimping tool, and RJ-45 plugs are required for this procedure.

Place the washer around the base of the Ethernet connector as shown.

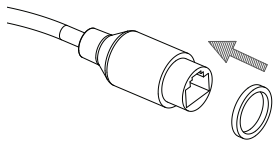

Thread bare Ethernet cable through the waterproof connector as shown.



Crimp an RJ-45 connector onto the end of the cable.

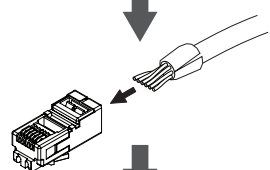

Connect the other end of the Ethernet cable to the camera's Ethernet port.

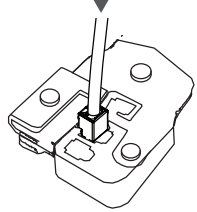

Connect the RJ-45 plug into the Ethernet connector, then screw the waterproof connector to the Ethernet connector by turning it clockwise for about a half-turn.

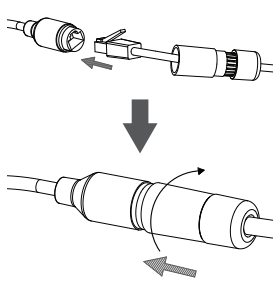

Screw the back part of the waterproof connector clockwise until there is a tight seal around the Ethernet cable.



If you are using PoE to power your camera, use the attached rubber power connector cover to seal the power connector.



If you are using a power adapter(not included) to power your camera, wind waterproof tape around the connection in an overlapping manner to cover it.

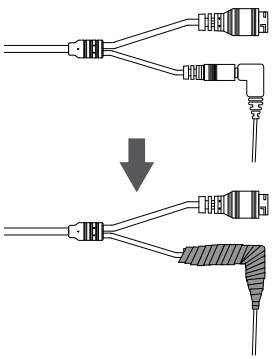

Additional Information

Additional help and product information is available online at http://www.dlink.com.

Warranty Information

Please visit http://warranty.dlink.com/ for warranty information for your region.

Правила и условия безопасной эксплуатации

Перед установкой и подключением устройства ознакомьтесь с кратким руководством по установке. Убедитесь, что устройство и кабели не имеют механических повреждений. Устройство должно быть использовано только по назначению, в соответствии с кратким руководством по установке.
Не устанавливайте устройство в зонах с влажностью и уровнем загрязнения воздуха свыше 80%; а также в области повышенного испарения и парообразования или усиленной вибрации.
Не используйте устройство с поврежденным корпусом. Температура окружающей среды в непосредственной близости от устройства и внутри его корпуса должна соответствовать указанной в технических характеристиках устройства.
Электропитание должно соответствовать параметрам электропитания, указанным в технических характеристиках устройства.

Не вскрывайте корпус устройства! Перед очисткой устройства от загрязнений и пыли отключите питание устройства. Удаляйте пыль с помощью влажной салфетки. Не используйте жидкие/аэрозольные очистители или магнитные/статические устройства для очистки. Избегайте попадания влаги в устройство.

Во избежание повреждения матрицы не направляйте объектив видеокамеры на очень яркие объекты и солнце.

Срок службы устройства – 2 года.

Гарантийный период исчисляется с момента приобретения устройства у официального дилера на территории России и стран СНГ и составляет один год. Вне зависимости от даты продажи гарантийный срок не может превышать 2 года с даты производства изделия, которая определяется по 6 (год) и 7 (месяц) цифрам серийного номера, указанного на наклейке с техническими данными.

Год: A - 2010, B - 2011, C - 2012, D - 2013, E - 2014, F - 2015, G - 2016, H - 2017, I - 2018, J - 2019, 0 - 2020.

Месяц: 1 - январь, 2 - февраль, ..., 9 - сентябрь, A - октябрь, B - ноябрь, C - декабрь.

При обнаружении неисправности устройства обратитесь в сервисный центр или группу технической поддержки D-Link.

Краткое руководство по установке

Данное руководство содержит основные инструкции по установке камеры DCS-4605EV. Для получения дополнительной информации по настройке камеры обратитесь к руководству пользователя на CD-диске из комплекта поставки или через Web-сайт D-Link.

Комплект поставки

- Сетевая камера DCS-4605EV
- Водонепроницаемый коннектор для кабеля
- Комплект для монтажа
- CD-диск с руководством пользователя и программным обеспечением
- Краткое руководство по установке

Если что-либо из перечисленного отсутствует, обратитесь к Вашему поставщику.

Меры безопасности:
Во избежании прекращения гарантии, установку и обслуживание должны проводить сертифицированные специалисты в соответствии с региональными нормами и правилами.

Обзор аппаратной части

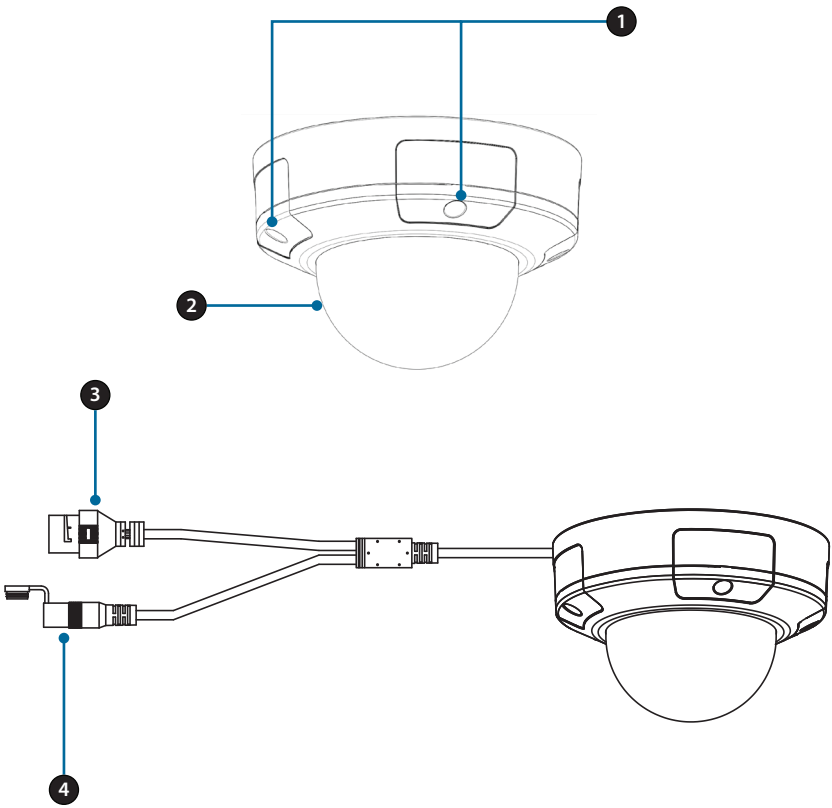

1	**Винты**	4 винта можно выкрутить с помощью ключа из комплекта поставки.
2	**Защитная крышка**	Защищает объектив камеры.
3	**Порт Ethernet**	Разъем RJ-45 для подключения Ethernet-кабеля, а также для подачи питания с помощью технологии Power over Ethernet (PoE).
4	**Разъем питания**	Разъем для подключения адаптера питания 12 В/1,5 А (адаптер не входит в комплект поставки).

Обзор аппаратной части

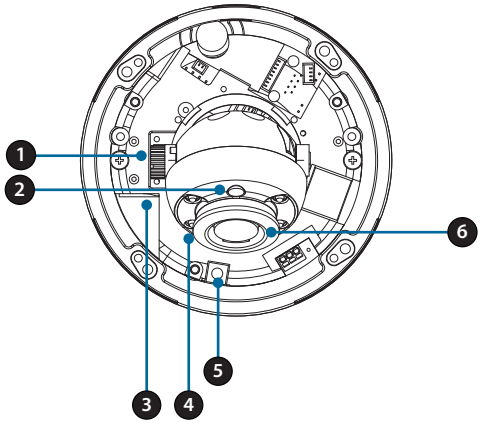

1	**Винт регулировки наклона объектива**	Позволяет отрегулировать угол наклона объектива камеры.
2	**Светочувствительный датчик**	Используется для определения условий освещения.
3	**Слот для карты microSD**	Позволяет записывать видео и снапшоты на карту microSD.
4	**Инфракрасная подсветка**	Используется для работы камеры в ночное время.
5	**Кнопка Reset**	Нажмите и удерживайте кнопку в течение 10 секунд для сброса настроек камеры.
6	**Объектив камеры**	Используется для формирования изображения.

Настройка камеры

Вставьте CD-диск с программным обеспечением в привод CD-ROM для начала установки. Если на компьютере отключена функция автоматического запуска, или запуск не произошел автоматически, нажмите Пуск > Выполнить. Введите **D:\autorun.exe**, где D: – имя привода CD-ROM, и нажмите **Enter**.

Нажмите **Setup Wizard** (Мастер Установки) и следуйте инструкциям для установки.

Выберите ярлык **D-Link Setup Wizard SE** в стартовом меню Windows (**Пуск > D-Link > Setup Wizard SE**).

Откроется окно Мастера Установки, где будет отображен MAC-адрес и IP-адрес вашей камеры. Если в сети используется DHCP-сервер, то будет отображен IP-адрес, назначенный этим сервером. Если в сети не используется DHCP-сервер, то отобразится статический IP-адрес камеры по умолчанию: **192.168.0.20**.

Выберите камеру и нажмите кнопку **Wizard** для продолжения.

Введите имя пользователя (Admin ID) и пароль (Password). Имя пользователя по умолчанию – **admin**, поле для пароля оставьте пустым.

Установите галочку, если хотите поменять имя пользователя и пароль камеры, и введите новое имя пользователя и пароль.

Нажмите **Next** (Далее), чтобы перейти на следующую страницу.

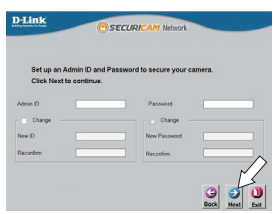

Выберите **DHCP**, если хотите, чтобы камера автоматически получала IP-адрес, назначенный DHCP-сервером.
Выберите **Static IP** (статический IP-адрес), если хотите, чтобы камера использовала постоянный IP-адрес.

Нажмите **Next** (Далее), чтобы перейти на следующую страницу.

РУССКИЙ

Проверьте настройки и нажмите **Restart** (Перезапустить).

Просмотр изображения камеры через Web-браузер

Выберите ярлык **D-Link Setup Wizard SE** в стартовом меню Windows (**Пуск > D-Link > Setup Wizard SE**).



Выберите камеру и нажмите кнопку **Link** для доступа к Web-настройкам.

Мастер установки автоматически откроет Web-браузер и страницу камеры.

При первом подключении к камере вам необходимо задать пароль для учетной записи администратора. Введите пароль и нажмите **Save** (Сохранить).

ИЛИ

В поле Password (Пароль) введите тот же пароль, который был задан во время установки, и нажмите **Login** (Войти).

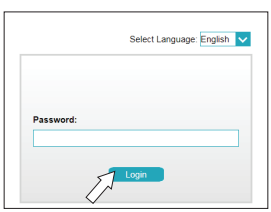

В данном разделе доступен просмотр видео с камеры в реальном времени. Для получения дополнительной информации о настройке камеры обратитесь к руководству пользователя, доступному на CD-диске и Web-сайте D-Link.

РУССКИЙ